



morphy richards

**3 Year
Guarantee***

*Upon registering your product
at morphyrichards.co.uk

AIR FLEX 6" Portable Oscillating USB Fan



Model No.

**820001/
820003**

User Manual

Please read and keep these instructions for future use





HEALTH AND SAFETY

The use of any electrical appliance requires the following common sense safety rules.

Please read these instructions carefully before using the product.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- **WARNING:** Misuse of appliance could cause personal injury.
- Keep the appliance and its cord out of reach of children.
- This appliance is intended for household use only. It is not suitable for use in staff kitchen areas in shops, offices and other commercial environments.



HEALTH AND SAFETY

LOCATION

- Ensure that the appliance is used on a firm, flat surface to reduce noise and vibration.
- Do not expose the appliance to direct sunlight.
- Do not use the appliance near water.
- The appliance should be a minimum of 30cm away from a wall or other obstructions that may prevent or impair oscillation.
- The appliance should be stood upright during operation; it should NEVER be laid on its side.
- Do not use the appliance next to curtains, clothing, tablecloths, hair or other items that can be drawn into unit.
- Do not use the appliance near flammable or explosive gases.

CHARGING CABLE

- Do not let the charging cable hang over the edge of the worktop where a child could reach it.
- Do not let the charging cable run across an open space e.g. between a low socket and table.
- Do not let the charging cable run across a cooker or other hot area which might damage the charging cable.
- The charging cable should run from the power source/socket to

the appliance without straining the connections.

- Do not operate the appliance with a damaged charging cable or charger (not supplied).

PERSONAL SAFETY

- Keep hands, hair and clothing, and utensils away from the appliance while in operation, to prevent personal injury and/or damage to the appliance.
- Do not operate with wet hands.

OTHER SAFETY CONSIDERATIONS

- The use of attachments or tools not recommended or sold by Morphy Richards, may cause fire, electric shock or injury.
- Do not move the fan while switched on.
- Do not use this product for anything other than it's intended use.
- Unplug from the outlet after it is charged.
- **WARNING: The appliance must not be immersed in water for cleaning.**
- **WARNING: Misuse of this appliance could cause personal injury.**




HEALTH AND SAFETY

BATTERY SAFETY & DISPOSAL

- Do not expose a battery pack or appliance to fire or excessive heat. Exposure to fire or temperatures above 130°C/265°F may cause an explosion.
- Recommended ambient charging and storage temperature: 10°C–40°C (50°F–104°F). Recommended operation temperature: 25°C+/- 5°C.
- Do not incinerate electrical appliances even if the appliance is severely damaged, as lithium-ion batteries may explode in fire.
- The lithium battery is not a serviceable item. Check with your Local Authority for recycling advice.



PRODUCT OVERVIEW

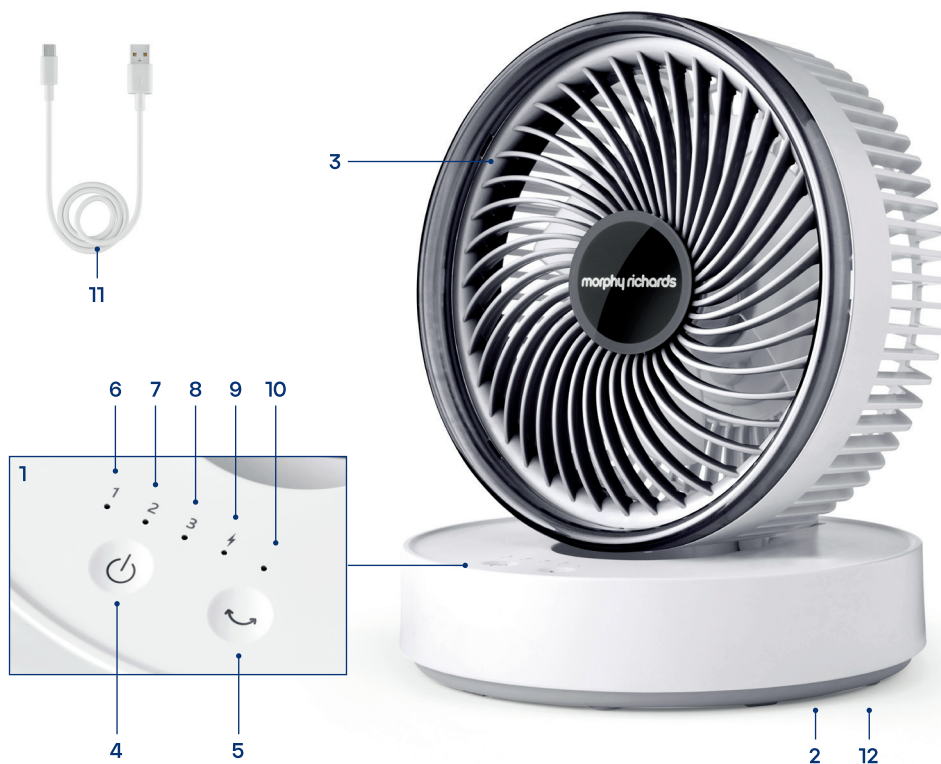

- | | |
|-------------------------------|--|
| 1. Control panel | 8. Speed 3 indicator |
| 2. Charging inlet (under fan) | 9. Charging indicator |
| 3. Front cover | 10. Oscillating Indicator |
| 4. On/Off button | 11. USB-C charging cable |
| 5. Oscillating button | 12. Wall mount locator hole
(wall mounting kit not supplied). |
| 6. Speed 1 indicator | |
| 7. Speed 2 indicator | |





BEFORE FIRST USE

- Remove all packaging
- Ensure the fan has been fully charged.
- Unfold the fan to the standing position.



CHARGING YOUR FAN

- Before first use of this appliance, the batteries must be fully charged (can take up to 3.5 hours).
- Connect the supplied USB-C cable (11) into the charging inlet (2) and then connect to a power supply.
- The charging indicator (9) will illuminate red while the fan is charging and will change to green when fully charged.
- NOTE: A 5V 2A adaptor must be used to charge the fan (not supplied).
- During use, the charging indicator (9) will flash red if the battery becomes low and needs recharging.





USING YOUR FAN

1. Press and hold the On/Off button (4) for 2 seconds to turn on the fan. Speed 1 indicator (6) will illuminate.
2. Press the On/Off button again to increase to Speed 2.
3. Speed 1 indicator will go out and Speed 2 indicator (7) will illuminate.
4. To increase to Speed 3 press the On/Off button again.
5. Speed 2 indicator will go out and Speed 3 indicator (8) will illuminate.
6. When the On/Off button is pressed for a 4th time, all 3 speed indicators illuminate, the fan operates in Nature mode. The speed will vary mimicking a natural breeze.
7. To stop the fan, press the On/Off button for 2 seconds. The fan will return to its central position.

Number of Power Button presses	Fan Speed without Oscillation	Approximate Run Time with full charge	Display Illuminated
1	1	17 hours	Speed 1 Indicator
2	2	8 hours	Speed 2 Indicator
3	3	4 hours	Speed 3 Indicator
4	Nature Mode	14 hours	All 3 Speed Indicators

OSCILLATION

1. Press the Oscillating Button (5), the Oscillating Indicator (10) will illuminate.
2. The fan will rotate 90 degrees to the left and right.
3. To stop oscillation press the Oscillating Button.



WALL MOUNTING

- The fan can be wall mounted using the wall mounting locator hole (12). Wall mounting kit is not included, please ensure to use fittings appropriate for the type of wall being mounted on.

CARE & CLEANING

- Always unplug the appliance before cleaning.
- Do not immerse in water.
- Do not use abrasives to clean the unit. Wipe the outer surface with a soft, damp cloth.
- Dry all parts thoroughly before you plug in to charge or operate again.
- The front cover (3) can be removed to access the blades for cleaning by removing the securing screw located at the back of the fan.

WARNING: The fan should be unplugged from the mains outlet before removing the front cover.

STORAGE

- Fold the fan and store in the original packaging if available.
- Store in a dry and ventilated area, away from high temperatures, high humidity, open flames, or direct sunlight.
- If the product is not to be used for 2 months or more, it should be stored with at least 50% battery power, however, fully charged would be preferable.



TROUBLESHOOTING

Problem	Possible Cause	Solution
Not turning on.	The battery isn't charged sufficiently.	Charge the battery using the charging cable supplied.
		Check the charging cable isn't damaged.
	The appliance hasn't been switched on.	Press and hold ON/OFF button
Indicator lights not working.	The battery isn't charged sufficiently.	Charge the battery using the charging cable supplied.
Noisy fan.	Dirty fan blades and /or foreign object obstruction.	Follow care and cleaning instructions to remove the front cover for cleaning, removal of foreign objects.

CONTACT US

If you are having a problem with your appliance, please contact our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you contact us to help us deal with your enquiry quicker.

email: hello@morphyrichards.co.uk

www.morphyrichards.co.uk

PRODUCT RECYCLING



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.





REGISTERING YOUR 3 YEAR GUARANTEE

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



**To validate your 3 year guarantee,
scan the QR code or register online
at www.morphyrichards.co.uk**

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

YOUR 2 YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out on the next page (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year



REGISTERING YOUR 3 YEAR GUARANTEE

guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.



AT820001MUK Rev1

morphy richards



@morphyrichardsuk #loveyourmorphy

morphyrichards.co.uk

Morphy Richards

9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

